

# Command Matrix

## Survey Office v5.90 Software

### Editions

Each Survey Office (SO) Edition is designed to support a set of related workflows:

- **Viewer (Unlicensed):**

Import + review field data, view projects, + export to Trimble field devices + software.

- **Field Data Edition:**

Export third-party field data, perform basic CAD functions, complete data quality control, + work with level data.

- **Survey Intermediate Edition:**

GNSS post-processing, network + traverse adjustments, site calibrations; work with background images, labels, + dimensions.

- **Survey Advanced Edition:**

Work with Trimble VISION™ data, create plan sets, process cadastral data, leverage full COGO + corridor routines.

## Command Matrix

### Survey Office v5.90 Software - Editions

Blue text denotes new or enhanced v5.90 features.

Command	Viewer	Field Data	Survey Intermediate	Survey Advanced
3D Preset Views	x	x	x	x
3D View Projection (Perspective vs. Ortho)	x	x	x	x
3D View Settings	x	x	x	x
About Trimble Business Center	x	x	x	x
Access Services	x	x	x	x
Activate Limit Box	x	x	x	x
Add External Job Site Design	x	x	x	x
<b>Add Mission</b>	<b>x</b>	<b>x</b>	<b>x</b>	<b>x</b>
Archive Project	x	x	x	x
Back	x	x	x	x
Backward Planar View (Backward Camera View)	x	x	x	x
Bottom	x	x	x	x
Bring Forward	x	x	x	x
Bring to Front	x	x	x	x
CAD Command Line	x	x	x	x
Center	x	x	x	x
Check for Updates	x	x	x	x
Cleanup Mobile Mapping Mission	x	x	x	x
Close Project	x	x	x	x
Colorize Scans	x	x	x	x
Command Pane	x	x	x	x
Compress/Email Field Data	x	x	x	x
Compute Project	x	x	x	x
Connected Community HCE	x	x	x	x
Controller Manager	x	x	x	x
Convert CSV to FXL	x	x	x	x
Convert TGO Project	x	x	x	x
Convert to RINEX	x	x	x	x
Coordinate Scroll	x	x	x	x
Coordinate System Manager	x	x	x	x
Copy Field Data to Data Card	x	x	x	x
Copy Field Data to USB Flash Drive	x	x	x	x
Copy Project Library to USB Flash Drive	x	x	x	x
Copy Work Order	x	x	x	x
Create Job Site Design	x	x	x	x
Create Vision Link Project	x	x	x	x
Create Work Order	x	x	x	x
Cutting Plane View	x	x	x	x
Define Command Shortcuts	x	x	x	x
Defined Views	x	x	x	x
Delete	x	x	x	x
Delete Work Order	x	x	x	x

## Command Matrix

### Survey Office v5.90 Software - Editions

Blue text denotes new or enhanced v5.90 features.

Command	Viewer	Field Data	Survey Intermediate	Survey Advanced
Device Pane	x	x	x	x
Edit Limit Box	x	x	x	x
eLearning	x	x	x	x
End-User License Agreement	x	x	x	x
Exit	x	x	x	x
Explore Object	x	x	x	x
Export Field Data (Trimble Machine Control)	x	x	x	x
Export GCS900 Excavator Profile Files	x	x	x	x
Export GCS900 Machine Avoidance Zone File	x	x	x	x
Export GCS900 Machine Jobsite Design	x	x	x	x
Export GCS900 Machine Site Map	x	x	x	x
Export GENIO Road	x	x	x	x
Export Measure Codes Definition File	x	x	x	x
Export Project Link Exporter VCL File	x	x	x	x
Export SIMA Format	x	x	x	x
Export Sketchup .skp Files	x	x	x	x
Export Somero .nod Files	x	x	x	x
Export Spectra Geospatial Origin Job File	x	x	x	x
Export Survey Controller Job File	x	x	x	x
Export Survey Data Collector DC File	x	x	x	x
Export Survey Pro Job File	x	x	x	x
Export TDS Interlock (.iji) File	x	x	x	x
Export Trimble Access job File	x	x	x	x
Export Trimble Access Road Strings	x	x	x	x
Export Trimble Access RXL Road Templates	x	x	x	x
Export Trimble JobXML Field Software Format	x	x	x	x
Feature Definition Manager	x	x	x	x
Filter Line Markings	x	x	x	x
Flags Pane	x	x	x	x
Float View	x	x	x	x
Front	x	x	x	x
Go To Run Position	x	x	x	x
Help	x	x	x	x
Import	x	x	x	x
Import .asc ASCII, TDEF, Raw Data, InRoads Hz and Vt Alignment Files	x	x	x	x
Import .CAL Site Calibration Files	x	x	x	x
Import .dat DiNi Level Files	x	x	x	x
Import .dat STAR*Net Level Files	x	x	x	x
Import .eje MDT Hz Alignment Files	x	x	x	x
Import .inf Fast Survey Files	x	x	x	x

## Command Matrix

### Survey Office v5.90 Software - Editions

Blue text denotes new or enhanced v5.90 features.

Command	Viewer	Field Data	Survey Intermediate	Survey Advanced
Import .pbj Rangefinder Laser Files	x	x	x	x
Import .raw (TDS, Nikon) Raw Data Files	x	x	x	x
import .sp3, sp3c precise ephemeris files	x	x	x	x
Import .xyz point Cloud Files	x	x	x	x
Import .y whole Point Cloud Files	x	x	x	x
Import ASCII CSV Files - PNEZD	x	x	x	x
Import ASCII CSV Files - Station, Offset, Elevation	x	x	x	x
Import Ashtech ProMark / ProFlex .crd Format	x	x	x	x
Import Ashtech ProMark / ProFlex .ddd Format	x	x	x	x
Import Autodesk DWG Format	x	x	x	x
Import Autodesk DXF Format	x	x	x	x
Import Bentley .icm.dgn iModel Files	x	x	x	x
Import Bentley Microstation dgn files	x	x	x	x
Import Business Center - HCE .VCL Project Link Files	x	x	x	x
Import CaAiCE .txt Files	x	x	x	x
Import Cartomap .txt Files	x	x	x	x
Import CLIP .alz Alignment Files	x	x	x	x
Import CLIP .plt Alignment Files	x	x	x	x
Import CLIP .trv Files	x	x	x	x
Import e57 Format	x	x	x	x
Import Fast Survey .sys Files	x	x	x	x
Import Format Editor	x	x	x	x
Import GCS900 .avoid Format	x	x	x	x
Import GCS900 .avoid.svl Avoidance Zone Files	x	x	x	x
Import GCS900 .cfg Coordinate System Files	x	x	x	x
Import GCS900 .dsp Format	x	x	x	x
Import GCS900 .mch Format	x	x	x	x
Import GCS900 .mch Measure Up Files	x	x	x	x
Import GCS900 .persist Format	x	x	x	x
Import GCS900 .pro Format	x	x	x	x
Import GCS900 .svd Files	x	x	x	x
Import GCS900 .svd Format	x	x	x	x
Import GCS900 .svl Files	x	x	x	x
Import GCS900 .svl Format	x	x	x	x
Import GCS900 .tsd Format	x	x	x	x
Import Geopak .xsr Cross Section Report File	x	x	x	x
Import HYDROpro .hpt Files	x	x	x	x
Import IFC Files	x	x	x	x
Import Inframodel .xml Files	x	x	x	x
Import InRoads .soe Files	x	x	x	x
Import IREDES .xml Tunnel and Drill Plan Files	x	x	x	x

## Command Matrix

### Survey Office v5.90 Software - Editions

Blue text denotes new or enhanced v5.90 features.

Command	Viewer	Field Data	Survey Intermediate	Survey Advanced
Import ISPOL .ali Alignment Files	x	x	x	x
Import ISPOL .ras Vertical Alignment Files	x	x	x	x
Import ISPOL .sce and .sc1 Files	x	x	x	x
Import LandXML Format	x	x	x	x
Import LAS/LAZ Format	x	x	x	x
Import Linestyle File	x	x	x	x
Import Measure Codes Definition File	x	x	x	x
Import MDT .ras Vertical Alignment Files	x	x	x	x
Import MDT .tra Files	x	x	x	x
Import MX GENIO .crd, .mos, .txt Files	x	x	x	x
Import NGS .ds Data Sheet Files	x	x	x	x
Import NGS .htm Data Sheet Files	x	x	x	x
Import NGS OPUS .xml Files	x	x	x	x
Import Norway .KOF Files	x	x	x	x
Import Norway .tit Files	x	x	x	x
Import Novapoint .gen Files	x	x	x	x
Import Novapoint .vgp Files	x	x	x	x
Import PCS900 .persist Display Configuration Files	x	x	x	x
Import POD Format	x	x	x	x
Import PTS Format	x	x	x	x
Import PTX Format	x	x	x	x
Import RCP Format	x	x	x	x
Import REB .021 Files	x	x	x	x
Import REB .040 Files	x	x	x	x
Import REB .066 Files	x	x	x	x
Import REB .66 Files	x	x	x	x
Import Report	x	x	x	x
Import Report	x	x	x	x
Import SBG .geo Files	x	x	x	x
Import SBG .gt Files	x	x	x	x
Import SBG .lin Files	x	x	x	x
Import SBG .llc Files	x	x	x	x
Import SBG .lmd Files	x	x	x	x
Import SBG .nyl Files	x	x	x	x
Import SBG .prf Files	x	x	x	x
Import SBG .pxy Files	x	x	x	x
Import SBG .sec Files	x	x	x	x
Import SBG .skv Files	x	x	x	x
Import SCS900 .gci Work Order Files	x	x	x	x
Import SCS900 .ini Site Settings File	x	x	x	x
Import SCS900 .spj Work Order Files	x	x	x	x
Import SCS900 .txt Work Order Results File	x	x	x	x

## Command Matrix

### Survey Office v5.90 Software - Editions

Blue text denotes new or enhanced v5.90 features.

Command	Viewer	Field Data	Survey Intermediate	Survey Advanced
Import Sitepulse .epj Work Order Result Files	x	x	x	x
Import Sketchup .skp Files	x	x	x	x
Import Somero .nod Files	x	x	x	x
Import SOSI Format	x	x	x	x
Import Spectra Precision Field Surveyor .asc Format	x	x	x	x
Import Spectra Precision Field Surveyor .dat Format	x	x	x	x
Import Spectra Precision Field Surveyor .xml Format	x	x	x	x
Import Spectra Precision Field Surveyor ASCII Format	x	x	x	x
Import Spectra Precision Focus DL-15 Level Files	x	x	x	x
Import Survey Pro .job Format	x	x	x	x
Import Survey Pro .raw Format	x	x	x	x
Import Survey Pro .survey Format	x	x	x	x
Import Survey Pro .xml Format	x	x	x	x
Import TDS Interlock .ilj Format	x	x	x	x
Import Terramodel PRO Files	x	x	x	x
Import .TRB TrimBim Files	x	x	x	x
Import Trimble .dat GNSS Files	x	x	x	x
Import Trimble .dc Data Collector Files	x	x	x	x
Import Trimble .dc Site Calibration Files	x	x	x	x
Import Trimble .FXL Feature Code Library Files	x	x	x	x
Import Trimble .pav Paving Run Files	x	x	x	x
Import Trimble .RXL RoadXML Files	x	x	x	x
Import Trimble .tdx Data Exchange Files	x	x	x	x
Import Trimble .tsf Scanner Files	x	x	x	x
Import Trimble .itm Surface Model Files	x	x	x	x
Import Trimble Access .dc Format	x	x	x	x
Import Trimble Access .job Format	x	x	x	x
Import Trimble Access .jxl Format	x	x	x	x
Import Trimble Access .rxl Format	x	x	x	x
Import Trimble Access .xml Format	x	x	x	x
Import Trimble Digital Fieldbook .dc Format	x	x	x	x
Import Trimble Digital Fieldbook .job Format	x	x	x	x
Import Trimble Digital Fieldbook .xml Format	x	x	x	x
Import Trimble GNSS .dat Format	x	x	x	x
Import Trimble GNSS .t00, .t01, .t02 Files	x	x	x	x
Import Trimble GNSS .t00/.t01/.t02 Format	x	x	x	x
Import Trimble Survey Controller .dc Format	x	x	x	x
Import Trimble Survey Controller .job Format	x	x	x	x
Import Trimble Survey Controller .jxl Format	x	x	x	x
Import Trimble Survey Controller .rxl Format	x	x	x	x
Import Trimble Survey Controller .xml Format	x	x	x	x
Import Trimble Survey Manager .jxl Format	x	x	x	x

# Command Matrix

## Survey Office v5.90 Software - Editions

Blue text denotes new or enhanced v5.90 features.

Command	Viewer	Field Data	Survey Intermediate	Survey Advanced
Import Trimble Survey Manager ASCII Format	x	x	x	x
Import Trimble Survey Pro .survey files	x	x	x	x
Import Wirth .y whole Files	x	x	x	x
Import Work Order Results	x	x	x	x
Import/Export User Options	x	x	x	x
<b>Internal Select Mode</b>	<b>x</b>	<b>x</b>	<b>x</b>	<b>x</b>
Invert Selection	x	x	x	x
Job Site Design Manager	x	x	x	x
Job Site Manager	x	x	x	x
Layer Group Manager	x	x	x	x
Layer Manager	x	x	x	x
Left	x	x	x	x
Left Mouse Pan	x	x	x	x
Left Mouse Rotate	x	x	x	x
Left Mouse Select	x	x	x	x
Left Mouse Zoom	x	x	x	x
License Manager	x	x	x	x
Material and Site Improvement Manager	x	x	x	x
Measure Angle	x	x	x	x
Measure Distance	x	x	x	x
Measure Distance CSV Report	x	x	x	x
Measure Point	x	x	x	x
Move to Next Tab Group	x	x	x	x
Move to Previous Tab Group	x	x	x	x
New 3D Drive View	x	x	x	x
New 3D View	x	x	x	x
New Cross-Section View	x	x	x	x
New Default Project	x	x	x	x
New Feature Library	x	x	x	x
New Horizontal Tab Group	x	x	x	x
New Plan View	x	x	x	x
New Plan View (old architecture)	x	x	x	x
New Profile View	x	x	x	x
New Project	x	x	x	x
New Station View	x	x	x	x
New Station View (referenced images)	x	x	x	x
New Vertical Tab Group	x	x	x	x
Office Synchronizer	x	x	x	x
<b>OGC Service Manager</b>	<b>x</b>	<b>x</b>	<b>x</b>	<b>x</b>
Online GNSS Planning	x	x	x	x
Open Project	x	x	x	x
Open Remote File	x	x	x	x

# Command Matrix

## Survey Office v5.90 Software - Editions

Blue text denotes new or enhanced v5.90 features.

Command	Viewer	Field Data	Survey Intermediate	Survey Advanced
Options	x	x	x	x
Orthographic	x	x	x	x
<b>Overexcavation Template Manager</b>	<b>x</b>	<b>x</b>	<b>x</b>	<b>x</b>
Pan	x	x	x	x
Pan Precise	x	x	x	x
Perspective	x	x	x	x
Plane Manager	x	x	x	x
Planning	x	x	x	x
Polygon Select	x	x	x	x
Presentation Mode	x	x	x	x
Process Raw Trajectory Data	x	x	x	x
Process SCS work order symbols	x	x	x	x
Process View	x	x	x	x
Profile Viewer	x	x	x	x
Project Explorer	x	x	x	x
Project Settings	x	x	x	x
Properties	x	x	x	x
Publish Field Data To Business Data Center	x	x	x	x
Publish Field Data to Project Library	x	x	x	x
Publish Library to USB	x	x	x	x
Publish to Vision Link	x	x	x	x
Quality Assurance Report	x	x	x	x
Reassign External Job Site Design	x	x	x	x
Reassign Work Order	x	x	x	x
Rectangle Select	x	x	x	x
Redo	x	x	x	x
<b>Reference File View Filter Manager</b>	<b>x</b>	<b>x</b>	<b>x</b>	<b>x</b>
Region of Interest	x	x	x	x
Register Software	x	x	x	x
Right	x	x	x	x
Run Last Command	x	x	x	x
Run View (Panoramic View)	x	x	x	x
Save File Remotely	x	x	x	x
Save Project	x	x	x	x
Save Project As	x	x	x	x
Save Project As Template	x	x	x	x
SCS Data Manager	x	x	x	x
Select All	x	x	x	x
Select by Layer	x	x	x	x
Select by Polygon	x	x	x	x
Select Points	x	x	x	x
Selection Explorer	x	x	x	x

# Command Matrix

## Survey Office v5.90 Software - Editions

Blue text denotes new or enhanced v5.90 features.

Command	Viewer	Field Data	Survey Intermediate	Survey Advanced
Send Backward	x	x	x	x
Send to Back	x	x	x	x
Set Limit Box	x	x	x	x
Set Menu Layout	x	x	x	x
Side Planar View (Side Camera View)	x	x	x	x
Site Calibration	x	x	x	x
Site Calibration Report	x	x	x	x
SiteVision AR Exporter	x	x	x	x
Snap Mode	x	x	x	x
Start Page	x	x	x	x
Station View Image Filter	x	x	x	x
Stored Measurements Report	x	x	x	x
Surface Slicer View	x	x	x	x
Tile Sequence Viewer	x	x	x	x
Toggle Gridlines	x	x	x	x
Toggle Line Marking	x	x	x	x
Toggle Visibility	x	x	x	x
Toggle Z-Axis	x	x	x	x
Top	x	x	x	x
Total Station Editor	x	x	x	x
Tours and Tutorials	x	x	x	x
<b>Trajectory Plots</b>	<b>x</b>	<b>x</b>	<b>x</b>	<b>x</b>
<b>Trajectory Settings</b>	<b>x</b>	<b>x</b>	<b>x</b>	<b>x</b>
Trimble Access Services	x	x	x	x
Trimble Clarity Viewer	x	x	x	x
Trimble Sync	x	x	x	x
Trimble Sync Manager	x	x	x	x
Undo	x	x	x	x
User Profile Manager	x	x	x	x
View 3D Preset Last Used	x	x	x	x
View Filter Manager	x	x	x	x
View Mission Trajectory (Toggle Trajectory)	x	x	x	x
VisionLink	x	x	x	x
Walk-Through	x	x	x	x
Work Order Editor	x	x	x	x
Work Order Report	x	x	x	x
Work Order Report	x	x	x	x
Work Orders Summary	x	x	x	x
Workflow Guides	x	x	x	x
Write FXL to CSV Viewer	x	x	x	x
Zoom	x	x	x	x
Zoom Extents	x	x	x	x

## Command Matrix

### Survey Office v5.90 Software - Editions

Blue text denotes new or enhanced v5.90 features.

Command	Viewer	Field Data	Survey Intermediate	Survey Advanced
Zoom In	x	x	x	x
Zoom Out	x	x	x	x
Zoom Precise	x	x	x	x
ADAC Settings		x	x	x
Add/Remove Selection		x	x	x
Advanced Select		x	x	x
As Staked Corridor Report		x	x	x
As Staked Report		x	x	x
Batter Conformance Report		x	x	x
Break Line		x	x	x
Change Coordinate System		x	x	x
Clip Lines		x	x	x
Combine Level Files		x	x	x
Coordinate System Comparison Report		x	x	x
Copy Objects		x	x	x
Create Arc		x	x	x
Create Block		x	x	x
Create Boundary		x	x	x
Create Circle		x	x	x
Create Dependent Point		x	x	x
Create Linestring		x	x	x
Create Plotbox		x	x	x
Create Point		x	x	x
Create Polygon		x	x	x
Create Polyline		x	x	x
Create Rectangle		x	x	x
Create Text		x	x	x
Create Three Point Circle		x	x	x
Create Three Point Rectangle		x	x	x
Datum Gridding		x	x	x
Delete Line Segment		x	x	x
Detect Crossing Geometry		x	x	x
Disable Redundant Backsights		x	x	x
Edit		x	x	x
Edit Dependent Point		x	x	x
Edit Linestring		x	x	x
Edit Text		x	x	x
Explode		x	x	x
Explode Points		x	x	x
Export .12da 12D Format Files		x	x	x
Export .laz Point Clouds		x	x	x
Export ADAC File		x	x	x

## Command Matrix

### Survey Office v5.90 Software - Editions

Blue text denotes new or enhanced v5.90 features.

Command	Viewer	Field Data	Survey Intermediate	Survey Advanced
Export Applianix Smartbase Format		x	x	x
Export BlueBook Format		x	x	x
Export DC Road Format From Corridor		x	x	x
Export DC Road Format From Surface		x	x	x
Export Digital Fieldbook Job File		x	x	x
Export DWG		x	x	x
Export DXF		x	x	x
Export e57 Point Clouds		x	x	x
Export e57 Structured Point Clouds		x	x	x
Export ESRI Shapefile Format		x	x	x
Export Field Surveyor V2 Job File		x	x	x
Export Format Editor		x	x	x
Export Google KML/KMZ Format		x	x	x
Export IFC		x	x	x
Export Inframodel File		x	x	x
Export KOF Vector Data File		x	x	x
Export LandXML File		x	x	x
Export las Point Clouds		x	x	x
Export pod point Clouds		x	x	x
Export pts Point Clouds		x	x	x
Export ptx Point Clouds		x	x	x
Export rcp Point Clouds (Autodesk recap)		x	x	x
Export RINEX Format		x	x	x
Export SDMS Format		x	x	x
Export SOSI Format		x	x	x
Export Trajectory CSV File		x	x	x
Export Trimble Data Exchange Format (TDEF) File		x	x	x
Export TTM File		x	x	x
Export X7 to TMX		x	x	x
External Processing Services		x	x	x
Feature Attributes Export		x	x	x
Feature Code Processing Report		x	x	x
Geoid Sub-Gridding		x	x	x
Import .12da 12D Format Files		x	x	x
Import Blocks		x	x	x
Insert Blocks		x	x	x
Import ESRI Shapefile Format		x	x	x
<b>Integrate Points into Geometry</b>		<b>x</b>	<b>x</b>	<b>x</b>
Inverse		x	x	x
Inverse Results Report		x	x	x
Job Report Generator		x	x	x
Join Lines		x	x	x

## Command Matrix

### Survey Office v5.90 Software - Editions

Blue text denotes new or enhanced v5.90 features.

Command	Viewer	Field Data	Survey Intermediate	Survey Advanced
Level Editor		x	x	x
Level Report		x	x	x
Line Style Manager		x	x	x
Line Type Editor		x	x	x
Local Site Settings		x	x	x
Mean Angle Report		x	x	x
Mean Angle Residuals		x	x	x
Merge Points		x	x	x
Mirror Objects		x	x	x
Move Objects		x	x	x
Move Survey Point		x	x	x
Name Objects		x	x	x
New Feature Spreadsheet		x	x	x
New Layer		x	x	x
New Occupation Spreadsheet		x	x	x
New Optical Spreadsheet		x	x	x
New Points Spreadsheet		x	x	x
New Vector Spreadsheet		x	x	x
Offset Line		x	x	x
Page Setup		x	x	x
Pipeline Attributes		x	x	x
Point Comparison Report		x	x	x
Point Derivation Report		x	x	x
Point List Report		x	x	x
Point Symbol		x	x	x
Print		x	x	x
Print Preview		x	x	x
Process Feature Codes		x	x	x
Processing Services		x	x	x
Project Computation Report		x	x	x
Publish to TCC		x	x	x
Purge Blocks		x	x	x
Related Files		x	x	x
Relayer Objects		x	x	x
Rename Points		x	x	x
Renamed Point List Report		x	x	x
Report Options		x	x	x
Rotate Objects		x	x	x
Save As Site		x	x	x
Scale Objects		x	x	x
Select by Elevation Range		x	x	x
Select Duplicate Points		x	x	x

## Command Matrix

### Survey Office v5.90 Software - Editions

Blue text denotes new or enhanced v5.90 features.

Command	Viewer	Field Data	Survey Intermediate	Survey Advanced
Select Observations		x	x	x
Select Points by Vector		x	x	x
Select Unprocessed Sessions		x	x	x
Start Data Service		x	x	x
Station Panorama Exporter		x	x	x
Symbol Editor		x	x	x
Symbol Manager		x	x	x
TDX Export		x	x	x
Text Style Manager		x	x	x
TopoDOT Export - Terrestrial Scan Data		x	x	x
Vector List Report		x	x	x
Write Features to GIS Report		x	x	x
Add Legend			x	x
Add Reference File			x	x
Add Surface Texture			x	x
Add to Point Cloud Region			x	x
Add/Remove Image Boundaries			x	x
Add/Remove Surface Boundaries			x	x
Add/Remove Surface Members			x	x
Adjust Network			x	x
Adjust Traverse			x	x
Alignment Editor			x	x
Alignment Geometry Report			x	x
ALTA/NSPS Allowable Relative Tolerance Report			x	x
Append to Alignment			x	x
Append Tracked Line			x	x
AreaLengthCountReport			x	x
Average Points			x	x
Baseline Processing Report			x	x
Big Point Size			x	x
Blended Display			x	x
Capture 3D			x	x
Capture Image			x	x
Change Elevation			x	x
Change Global to Local			x	x
Change Local to Global			x	x
Clear Adjustment Results			x	x
Clear Processing Results			x	x
Clear Site Calibration			x	x
Clear Traverse Adjustment Result			x	x
Clip Selected			x	x
Clip Unselected			x	x

## Command Matrix

### Survey Office v5.90 Software - Editions

Blue text denotes new or enhanced v5.90 features.

Command	Viewer	Field Data	Survey Intermediate	Survey Advanced
Color Regions By Elevation			x	x
Colorize Region			x	x
Convert As-Staked Point			x	x
Convert CAD Points			x	x
Convert Global to Local			x	x
Convert Local To Global			x	x
Copy Stored Cross-Section			x	x
Copy To Profile			x	x
Copy View To Clipboard			x	x
Create Alignment			x	x
Create Alignment From a GENIO 6D String			x	x
Create Angular Dimensions			x	x
Create Breakline			x	x
Create CAD Points from Scan Points (Scan to CAD)			x	x
Create Contour at Elevation			x	x
Create Contours			x	x
Create Custom Report			x	x
Create Cut/Fill Map			x	x
Create Hatch			x	x
Create Horizontal Alignment Label			x	x
Create Leader Lines			x	x
Create Line Label Table			x	x
Create Linear Dimensions			x	x
Create Linestring from Points			x	x
Create Planar Surface			x	x
Create Point Cloud Region			x	x
Create Point Label Table			x	x
Create Points at Intervals			x	x
Create Points from CAD			x	x
Create Polygon Label Table			x	x
Create Quick Contour at Elevation			x	x
Create Quick Contours			x	x
Create Stored Cross-Section			x	x
Create Surface			x	x
Create Surface Cross-Section			x	x
Create Surface Edge Breakline			x	x
Create Surface Elevation Grid			x	x
Create Surface Intersection			x	x
Create Surface Intersection Lines			x	x
Create Surface Profile			x	x
Create Surface Tie			x	x
Create Volume Grid			x	x

## Command Matrix

### Survey Office v5.90 Software - Editions

Blue text denotes new or enhanced v5.90 features.

Command	Viewer	Field Data	Survey Intermediate	Survey Advanced
Define Corridor Strata			x	x
Densify an alignment based surface			x	x
Dimension Style Manager			x	x
Disable Baselines			x	x
Disable Sessions			x	x
Disable Trajectories			x	x
Divide Line			x	x
Drape Objects On Surface			x	x
Earthwork Report			x	x
Edit Alignment Labels			x	x
Edit Color Mapping			x	x
Edit Custom Report			x	x
Edit Dimensions			x	x
Edit Label Table			x	x
Enable Baselines			x	x
Enable Sessions			x	x
Enable Trajectories			x	x
Export RXL Road Format from Alignment			x	x
Export RXL Road Format From Surface			x	x
Extra Large Point Size			x	x
Fillet/Chamfer			x	x
Finished Pavement Report			x	x
Finished Surface Report			x	x
Flatten Surface			x	x
Flip an Azimuth Bearing Label			x	x
Force Continuous			x	x
Geometry Report			x	x
Georeference Image			x	x
Georeference Vector PDF			x	x
Get All points			x	x
Get Unused Points			x	x
GNSS Loop Closure			x	x
GNSS Loop Closure Results Report			x	x
Google Earth			x	x
GVX Exporter			x	x
Import Vector PDF Data			x	x
Insert Image			x	x
Internet Download			x	x
Keep In			x	x
Keep Out			x	x
Label Contours By Crossing			x	x
Label Lines			x	x
Label Points			x	x

## Command Matrix

### Survey Office v5.90 Software - Editions

Blue text denotes new or enhanced v5.90 features.

Command	Viewer	Field Data	Survey Intermediate	Survey Advanced
Label Polygons			x	x
Label Style Manager			x	x
Label Table Style Manager			x	x
Labelling Scale Factor			x	x
Large Point Size			x	x
Match Properties			x	x
Measure Volume			x	x
Medium Point Size			x	x
Merge Regions			x	x
Merge Surfaces			x	x
Move/Rotate/Scale Objects			x	x
Move/Rotate/Scale Objects by Points			x	x
MSI Report			x	x
Network Adjustment Report			x	x
New Time-Based View			x	x
Normal Shading			x	x
Number of loaded points (display Options)			x	x
Pavement Conformance Report			x	x
Place Image			x	x
Point Cloud Rendering Settings			x	x
Points to Surface			x	x
Points to Surface Report			x	x
Process Baselines			x	x
REB 21.003 Volume Report			x	x
REB 21.033 Linear Surface Areas Report			x	x
REB 22.013 Prismatic Volume Report			x	x
REB 23.003 Calculation Report			x	x
REB Tools			x	x
Rebuild Alignment Labels			x	x
Rebuild Contours			x	x
Rebuild Surface			x	x
Render Point Cloud Region			x	x
Render Point Cloud Region Using Color-Coded Intensity			x	x
Render Point Cloud Region Using Gray-Scale Intensity			x	x
Render Point Cloud Region Using Region Color			x	x
Render Point Cloud Region Using Scan Color			x	x
Render Point Cloud Regions Using Color by Elevation			x	x
Render Point Cloud Regions Using True Color			x	x
RenderByBlendedIntensity			x	x
Rendering Settings			x	x
RenderPointCloudSwitch			x	x
Restore All			x	x

# Command Matrix

## Survey Office v5.90 Software - Editions

Blue text denotes new or enhanced v5.90 features.

Command	Viewer	Field Data	Survey Intermediate	Survey Advanced
Restore Region			x	x
Sample Point Cloud Regions			x	x
Sample Point Clouds			x	x
Select Similar			x	x
Send to RTX-PP			x	x
Session Editor			x	x
Set Line Elevation			x	x
Show Map			x	x
Shrink 3D Faces			x	x
Small Point Size			x	x
Standardize Layers			x	x
Stored Cross-Section Editor			x	x
Surface Information Report			x	x
Swap Label Sides			x	x
Swap Surface Triangles			x	x
Switch Point Size			x	x
Toggle Background Map			x	x
Track Region Outline			x	x
Traverse Adjustment Report			x	x
Trim Surface Edge			x	x
Trim/Extend Lines			x	x
Trimble Access Roads Strings			x	x
Trimble Access Roads RXL Templates			x	x
Add Isopach				x
Assign Names from Inside Text				x
Best-Fit Line				x
Build Sheets				x
Camera Calibration				x
Camera Calibration Check Report				x
Combine Surfaces				x
Convert to Linestring				x
Copy to Sheet				x
Corridor Definition Report				x
Corridor Earthwork Report				x
Create 3D PDF				x
Create COGO				x
Create Corridor				x
Create Corridor Surface				x
Create Custom Sheet				x
Create Dynaview				x
Create Dynaview Boundary Collection				x
Create Linestring from Point Cloud				x

## Command Matrix

### Survey Office v5.90 Software - Editions

Blue text denotes new or enhanced v5.90 features.

Command	Viewer	Field Data	Survey Intermediate	Survey Advanced
Create Plan Set				x
Create Projected Surface				x
Create Quick Profile				x
Create Radial Surface				x
Create Rectified Image				x
Create Scale Bar				x
Create Shareable Slope Table				x
Create Sheet Set				x
Create Side Slope				x
Create Sub-Template				x
Create Surface From Reference File				x
Define Depth Plane				x
Delete Dynaview Boundary Collection				x
<b>Divide Area</b>				<b>x</b>
Double Proportioning				x
Double Proportioning Report				x
Drafting Templates				x
Dynaview Collection				x
Edit Alignment as Spreadsheet				x
Edit Corridor				x
Edit Corridor Template				x
Edit Dynaview Boundary Collection				x
Edit Shareable Slope Table				x
Edit Sheet Set				x
Explode Dynaview Grid				x
Explode Surface				x
Grid Style Manager				x
History Log View				x
Import MXDB Database				x
Insert Corridor Template				x
Legal Description Writer				x
List Project Objects				x
Macros				x
Manage Material Layers				x
Manage Template Node Names				x
Manual (MX7) Camera Calibration				x
Map Check Report				x
Mapillary Panorama Exporter				x
Measure Photo Point				x
Merge Survey Projects				x

## Command Matrix

### Survey Office v5.90 Software - Editions

Blue text denotes new or enhanced v5.90 features.

Command	Viewer	Field Data	Survey Intermediate	Survey Advanced
New Photo Point Spreadsheet				x
New Sheet View				x
Offset Surface				x
<b>Points Area</b>				x
Print Plan Set				x
Process Panoramas				x
Publish to Clarity				x
Quick Line				x
Reproject Surface				x
Roughness Index Report				x
Select Point Cloud By Boundary				x
Single Proportioning				x
Single Proportioning Report				x
Station Offset Elevation Report				x
Superelevation Diagram				x
Superelevation View				x
Surface To Pts				x
Switch Text				x
Terrestrial Bundle Adjustment Report				x
TopoDOT Export - Mobile Mapping Data				x
Transform Survey Points				x
Transform Survey Points Report				x
Trimble MX Cubical Exporter				x
Trimble MX Panorama Exporter				x
Virtual DR				x
XML Horus Exporter				x

# Command Matrix

## Survey Office v5.90 Software

### Modules

Each Survey Office (SO) Module is designed to support a group of workflows around a single topic. The modules are add-ons to an edition.

- **Aerial Photogrammetry Module:** Process + create deliverables with Trimble + third-party UAS data in TBC + UASMaster.
- **GIS Module:** Seamlessly integrate GIS data from Trimble Access™ + TerraSync™ software into TBC + connect to external GIS databases.
- **Scanning Module:** Register + colorize SX10 + X7 data; classify regions, extract features, + create deliverables from SX10, X7, + 3rd party point clouds.
- **Tunneling Module:** Create + edit tunnel models for Trimble Access Tunnels + create customized as-built + geometry reports.

## Command Matrix

### Survey Office v5.90 Software - Modules

**Blue text denotes new or enhanced v5.90 features.**

Command	Aerial Photogrammetry	GIS	Scanning	Tunneling
Adjust Photo Stations	x			
Adjust Photo Stations with GCPs	x			
Create Deliverables	x			
Export Flight Mission	x			
Flight Mission Adjustment Report	x			
Import UAS Data	x			
Merge Flight Missions	x			
Open UASMaster	x			
Send to UASMaster	x			
senseFly eMotion Exporter	x			
Add GIS Connection		x		
Export ESRI File Geodatabase		x		
Export Geodatabase XML		x		
Get GIS Schema		x		
GIS Connection Manager		x		
Import .cor Files		x		
Import ESRI File Geodatabase		x		
Import SSF Files		x		
Map Metadata		x		
Read Features from GIS		x		
Remove GIS Connection		x		
Write Features to GIS		x		
Ambient Shading Display			x	
Create High/Low Point			x	
Create Orthophoto			x	
Create Scan Station			x	
<b>Drape Objects on a Point Cloud</b>			x	
<b>Enhanced Ambient Shading Mode</b>			x	
Extract Classified Point Cloud Regions - Indoor / Outdoor			x	
Extract Cross-sections From Point Clouds			x	
<b>Extract Geometry</b>			x	
Extract Ground			x	
Extract Line Feature			x	
Extract Point Feature			x	
<b>Extract Stockpile</b>			x	
Filter Point Cloud			x	
Georeference Scan			x	
Import FLS Scan Files			x	
Import TZF Scan Files			x	
Intensity Based Filtering			x	
Measure Overhead Line Clearance			x	
Measure Vertical Clearance			x	
No Shading Display			x	
Normal Shading Display			x	

# Command Matrix

## Survey Office v5.90 Software - Modules

Blue text denotes new or enhanced v5.90 features.

Command	Aerial Photogrammetry	GIS	Scanning	Tunneling
Outline Visibility Mode			x	
Point Cloud Region Classifier (Classify Point Clouds)			x	
Point Cloud Smart Picking			x	
Sample Point Cloud Regions by Intensity			x	
Scan Georeferencing			x	
Scan Inspection Report			x	
Scan Refinement Report			x	
Scan Registration			x	
See Inside Visibility Mode			x	
<b>Stockpile Report</b>			x	
Add/Remove As-Built Tunnel Mesh Members				x
Add Tunnel Shape Template				x
Assign Tunnel As-Built Points				x
Copy Tunnel				x
Create As-Built Tunnel Mesh				x
<b>Create CAD Tunnel Cross Sections</b>				x
Create Designed Tunnel Mesh				x
Create Tunnel				x
Create Tunnel Alignment				x
Create Tunnel Corridor				x
Create Tunnel Inspection Map				x
Create Tunnel Inspection Points				x
Create Tunnel Shape				x
Create Tunnel Shape From CAD				x
Create Tunnel Template				x
Edit Horizontal Tunnel Offset				x
Edit Set Outs				x
Edit Tunnel Rotation				x
Edit Tunnel Shape				x
Edit Vertical Tunnel Offset				x
Export SCS900 Tunnel XML File				x
Export TXL				x
Import TXL				x
Rebuild As-Built Tunnel Mesh				x
Select Tunnel Points				x
Tunnel As-Built Report				x
Tunnel As-Built Report (with best-fit circle)				x
Tunnel ASCII Report				x
Tunnel Inspection Report				x
<b>Tunnel Inspection View</b>				x
Tunnel Set Outs As-Built Report				x
Tunnel View				x

Disclaimer: Trimble reserves the right to change the licensing or make corrections to the program at any time through an update to Survey Office and/or a correction to this list.

No guarantees are implied and you should confirm licensing details with your Distribution Partner before purchasing.

©2022–2023, Trimble Inc. All rights reserved. Spectra Geospatial is a division of Trimble Inc. Spectra Geospatial is a registered trademark of Trimble Inc., registered in the United States and in other countries. Access, TerraSync and VISION are trademarks of Trimble Inc. All other trademarks are the property of their respective owners. PN 022516-663A (06/23)

